


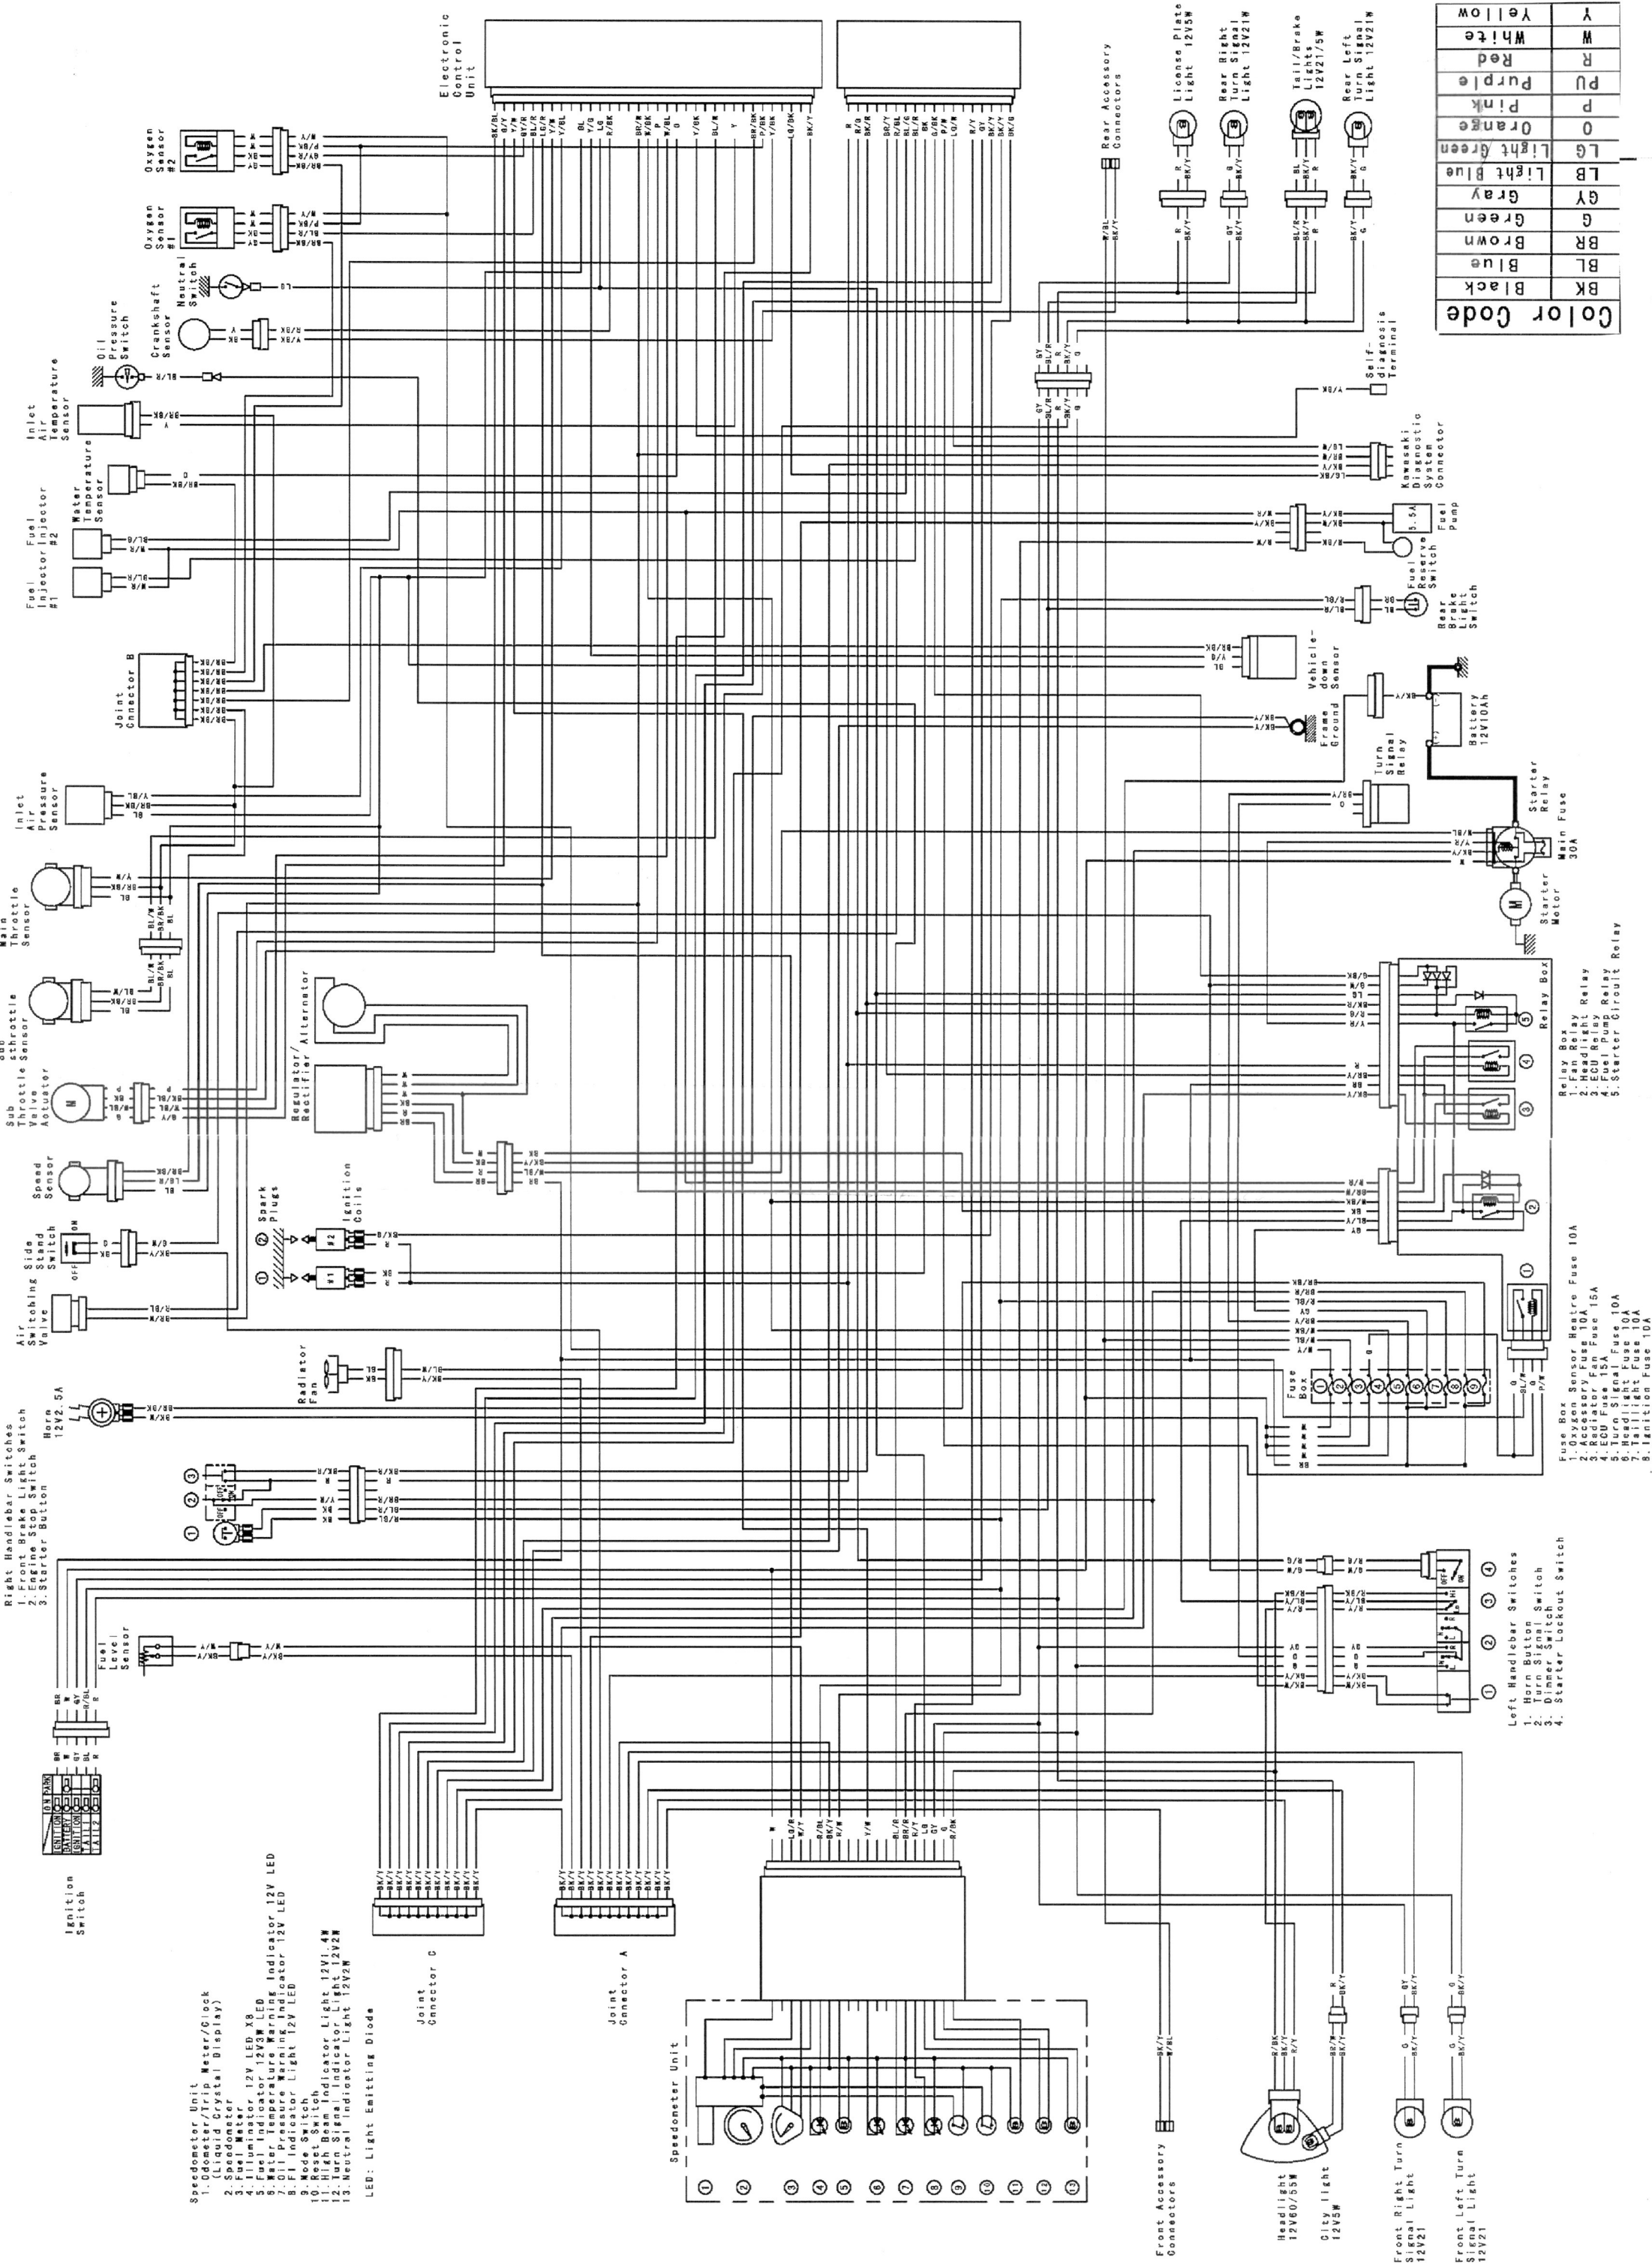

Color Code	
Y	Yellow
W	White
PU	Purple
P	Pink
O	Orange
LG	Light Green
LB	Light Blue
GY	Gray
G	Green
BR	Brown
BL	Blue
BK	Black

- Speedometer Unit**
1. Odometer/Trip Meter/Clock (Liquid Crystal Display)
 2. Speedometer
 3. Fuel Indicator 12V LED X8
 4. Fuel Indicator 12V LED X8
 5. Fuel Indicator 12V LED X8
 6. Fuel Indicator 12V LED X8
 7. Oil Pressure Warning Indicator 12V LED
 8. Oil Pressure Warning Indicator 12V LED
 9. Oil Pressure Warning Indicator 12V LED
 10. Oil Pressure Warning Indicator 12V LED
 11. High Beam Indicator Light 12V1.4W
 12. Turn Signal Indicator Light 12V2W
 13. Neutral Indicator Light 12V2W
- LED: Light Emitting Diode

- Fuse Box**
1. Oxygen Sensor Heater Fuse 10A
 2. Accessory Fuse 10A
 3. ECU Fuse 15A
 4. ECU Fuse 15A
 5. Turn Signal Fuse 10A
 6. Headlight Fuse 10A
 7. Taillight Fuse 10A
 8. Ignition Fuse 10A

- Relay Box**
1. Fan Relay
 2. Headlight Relay
 3. ECU Relay
 4. Fuel Pump Relay
 5. Starter Relay

- Left Hand Side Switches**
1. Horn Button
 2. Turn Signal Switch
 3. Horn Switch
 4. Starter Lockout Switch

- Relay Box**
1. Fan Relay
 2. Headlight Relay
 3. ECU Relay
 4. Fuel Pump Relay
 5. Starter Relay

- Fuse Box**
1. Oxygen Sensor Heater Fuse 10A
 2. Accessory Fuse 10A
 3. ECU Fuse 15A
 4. ECU Fuse 15A
 5. Turn Signal Fuse 10A
 6. Headlight Fuse 10A
 7. Taillight Fuse 10A
 8. Ignition Fuse 10A